

GNSS receiver and Depth Sounder




Topcon Technical Support

- Writer: Javier Ramirez
- Product: Magnet field basic set up for Depth Sounder


These instructions are basic depth sounder set up for further detail in the equipment being used it will depend on the hardware and configuration being used (RTK, Optical, Network RTK, DGPS)



Add a new Configuration or you can edit an existing one | Choose the correction type

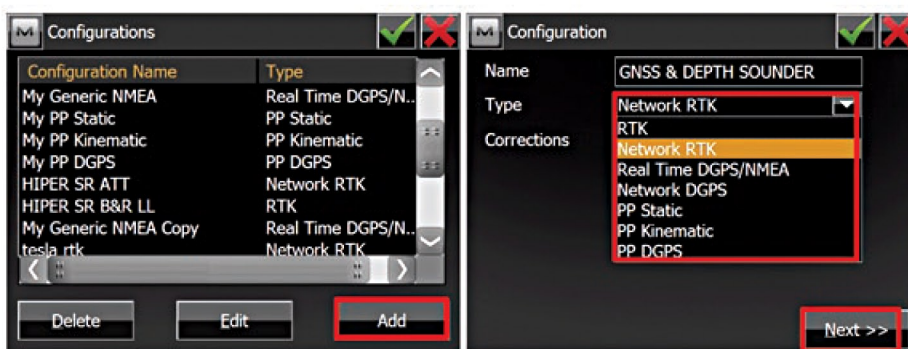

>>>Next 3 Times the Perirals set up button will be available | Also remember to use the correct driver for the depth sounder if driver not available select generic NMEA and the port information default is Bluetooth but serial is incorraged

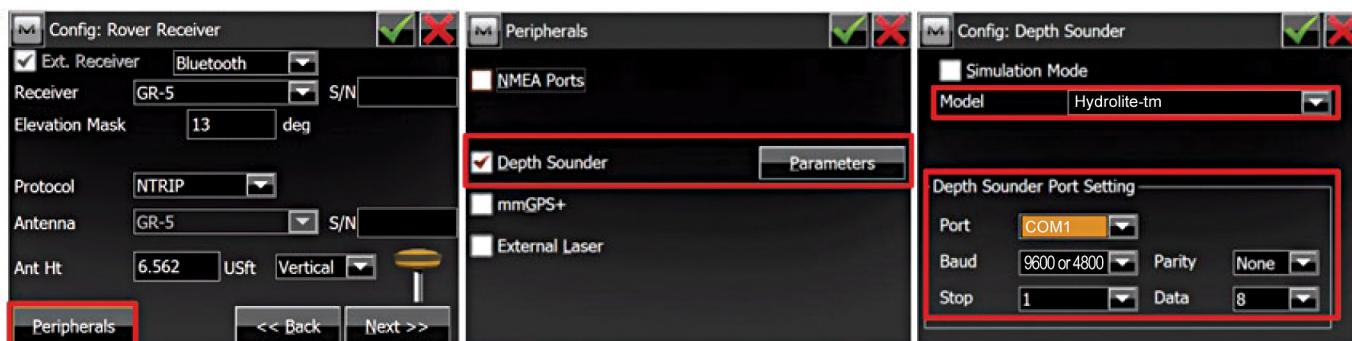

Also remember that you can go to the topo module, then to the map view and tab on the screen to select depth

Note: Newer 2013 and 1/2 models use baud rate of 4800