

ECHOBOAT-240™



Start Up

- ① Center all switches and joysticks.
- ② Hold Power button until all four loading process dots appear on the screen.
- ③ If "Switch Warning" appears, ensure all switches are turned off or centered (Winch Knob center), auto switch is set to Manual and arming is set to Disarm.

Arm EchoBoat-240™

- ① To arm EchoBoat's AutoNav, move arming switch to arming position then hold arming toggle switch up for 3 seconds. You will hear the EchoBoat AutoNav chime when arming is complete.
- ② To Disarm, switch the Arm switch to Disarm and hold arming safety switch for 3 seconds. The AutoNav will chime when disarmed.

Optional Long Range Module

- ① Install R9M with antenna on the back side of the remote.
- ② Plug in external 2s battery to the R9M.

Rev: 10/16/2020